

Questions or Comments

For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: 1-800-777-5206

Please also visit our website: www.kiddesigns.com

Troubleshooting

To reset the toy, press the Reset Button on the bottom of the unit.

If the toy does not play, check the batteries. They are probably weak and need to be replaced with a new batteries.

If the unit still does not work after changing the batteries, make sure you have installed them properly (make sure the + and - polarities match up with the diagram printed inside the battery compartment).

If there is a distorted or fuzzy sound, the batteries may be weak. Replace with new batteries.

If improper operation continues, momentarily remove then install batteries, while making sure that you have installed them correctly.

If problems persist, DO NOT ATTEMPT TO REPAIR THE UNIT. See the Warranty for factory services.

FCC Information

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)/NMB-3(B)

Maintenance

It is important to keep the Cash Register as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Keep the Cash Register away from direct sunlight or sources of excessive heat. Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

Protect your furniture when placing the unit on natural wood or wood with a lacquered or coated finish. A cloth or other protective material should be placed between the unit and the furniture.

If the toy is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Limited One Year Warranty

KIDdesigns warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, KIDdesigns will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service.

If service is required, please call Customer Service at 1-800-777-5206 to obtain a Return Authorization Number and shipping instructions. Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will KIDdesigns or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your KIDdesigns product.

KIDdesigns, Inc.

Questions? Visit www.kiddesigns.com

For any other questions: 1-800-777-5206 Toll Free
1299 Main Street Rahway NJ 07065

© 2015 Mattel, Inc.

BARBIE and associated trademarks and trade dress are owned by, and used under license from Mattel

Barbie™

Model: BE-189

SHOP-TASTIC CASH REGISTER




WARNING:
CHOKING HAZARD—Small parts.
Not for children under 3 years.

Important Message to Customers

Thank you for purchasing one of Barbie™'s top-quality electronic products. Please take a moment to read through these instructions to help you understand the safe and proper way to use this toy to extend its usability. Keep these instructions for future reference as they contain important information.

Installing the Batteries

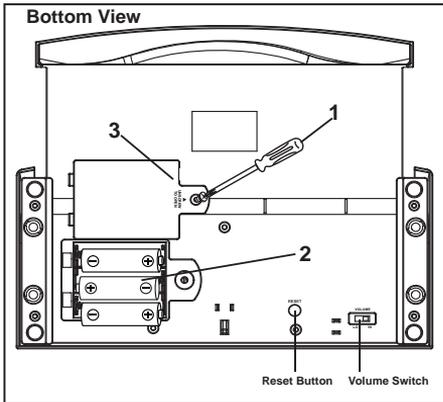

ATTENTION: Batteries should only be installed by an adult. The unit comes with 3 "AA" (R6) batteries already installed. Those batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries when the toy is brought home. To replace the batteries, follow these instructions:

1. The battery compartment is located on the bottom of the toy. Open the Cash Register drawer and turn unit over. Use a Phillips screwdriver to open the battery compartment door.
2. Install 3 "AA" (R6) batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
3. Close the battery compartment door and tighten the battery door screw (do not over tighten).

Battery Use Cautions and Tips for Safety and Best Performance

- Only use the recommended/ supplied batteries or equivalent
- Use alkaline batteries for longer life
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries
- Insert batteries with proper polarity (+/-) as indicated
- Remove exhausted batteries from product
- Recharge rechargeable batteries under adult supervision
- Do not attempt to recharge non-rechargeable batteries
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire
- Follow applicable laws and local regulations for the disposal and transportation of batteries.



Playing with the Cash Register

Your new shop is open for business! Use the Cash Register to scan items, swipe gift cards, and make change just like a real cashier. Read these instructions to learn how to have lots of fun!

Shopping for items

1. Press any button to turn on the unit. The unit will automatically turn off after a few minutes if no further button is pressed.
2. To begin shopping, press the desired Keypad Buttons to enter a price then confirm it by pressing the Button. If you make a mistake or don't wish to confirm, press the Clear Button then begin shopping again.
3. Having a sale? Press the Button to save money for your customers!
4. Press the Button any time to hear comments in the voice of Barbie while you shop.
5. When you're done shopping, press the Button. You will hear the total price of your purchases.
6. When prompted, swipe your Gift Card or Debit Card or slide the drawer open.
7. To open the cash register, pull gently but firmly on the drawer from the center above the mark. Press cash drawer in to close it.
8. Enjoy your Shopping Spree experience!

NOTE: Press and hold the Button for two seconds to turn off the toy.

Adjusting the volume

Full open the Cash Register drawer and turn unit over to access the Volume Control Switch located on the bottom of the unit. Move switch to Hi or Lo for your desired volume setting.

"BARBIE GIRL"

Johnny Mosegaard-Pedersen, Karsten Dahlgaard, Claus Norren, Soren Rasted, Rene Dif And Lene Nystrom
 © Universal/MCA Music Scandinavia AB
 All rights on behalf of Universal/MCA Music Scandinavia AB administered by Universal Music Corp.
 © Warner/Chappell Music Denmark A/S (KODA)
 All rights on behalf of Warner/Chappell Music Denmark A/S administered By WB Music Corp. All Rights Reserved. Used By Permission