


Installing the Batteries

ATTENTION: Batteries should only be installed by an adult.

The unit comes with batteries already installed. These batteries are meant for in-store demonstration use only, and should be replaced with fresh batteries. To replace the batteries at home:

- 1 Use a Philips screwdriver to open the battery compartment door.
- 2 Install 2 "AAA" size batteries into the compartment, making sure that the + and - polarities match the diagram printed inside.
- 3 Close the battery compartment door and tighten the battery door screw. Don't over tighten.

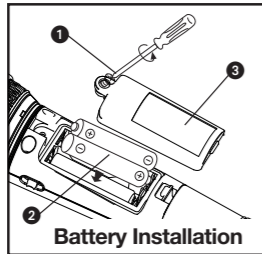

For the Best Possible Performance

- We recommend the use of alkaline batteries for longer life.
- Different types of batteries or new and used batteries are not to be mixed.
- Batteries are to be inserted with correct polarity.
- Remove exhausted batteries from the unit.
- Do not attempt to recharge non-rechargeable batteries.
- Remove rechargeable batteries from the unit before charging.
- The supply terminals are not to be short-circuited.
- Batteries should be removed if the item is not going to be needed for an extended period of time (approximately 30 days or more) to prevent leakage or damage to the unit.
- Rechargeable batteries are only to be recharged under adult supervision.

Maintenance

It is important to keep the unit as dry and clean as possible. Clean the unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials are not recommended, as they may damage the surface of the case.

Do not allow dirt, sand, small particles, water or other liquids to enter the toy's casing.

If the unit is to be left unused for an extended time period, such as a month or longer, have an adult remove the battery to extend its life and to prevent leaking or corrosion.

Remove Demo Tab

- The unit is equipped with a Try Me feature. Before using the unit, pull out the plastic Demo Tab located on back panel.

Questions or Comments

☎ For questions or comments regarding this or other KIDdesigns products, please call our toll-free number: 1-888-TOP-TOYS.

Please also visit our website: www.kiddesigns.com

Limited One-Year Warranty

KIDdesigns, a division of SDI Technologies Inc. (hereafter referred to as SDI), warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, SDI will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by SDI Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required:

1. Call KIDdesigns Customer Service at 1-888-TOP-TOYS (867-8697) for Return Authorization and for the address of the Factory Service Center.
2. Remove the batteries (if applicable) and pack the unit in a well-padded, heavy corrugated box. KIDdesigns is not responsible for damage that occurs during shipping to the Factory Service Center.
3. Enclose a photocopy of your sales receipt, credit card statement, or other proof of the date of purchase, if within the warranty period. Also include your name and address information, a brief description for why the unit is being returned, and the return authorization number. No unit can be processed without a return authorization number.
4. Write the return authorization number on the side of the shipping package and send the unit prepaid and insured to the Factory Service Center address authorized by KIDdesigns Customer Service.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner. This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will KIDdesigns or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your KIDdesigns product.

© 2014 SDI Technologies, Inc. All Rights Reserved.
Questions? Visit www.kiddesigns.com
or call 1-888-TOP-TOYS

© Disney Visit Disney.com

Distributed by KIDdesigns, Inc. Rahway, NJ 07065-5024
eKids is a wholly owned subsidiary of KidDesigns, Inc,
1299 Main Street Rahway NJ 07065



Important Message to Customers

Thank you for purchasing one of our many top-quality Disney electronic products. We would appreciate it if you take a few moments to read through these instructions. This will help you explain to the child the safe and proper way to use this product, and to help give it the long-lasting life that Disney's products are designed for.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
CAN ICES-3 (B)/NMB-3(B)

Playing with the Microphone


There are two ways to have musical fun with your Magical Microphone. You can sing along to the built-in songs, or to any song on your MP3 player or other audio device by connecting it via the included MP3 Cable (see instructions below). Flashing lights add to the excitement! Have a great show!

Song Mode

- Slide the **Mode Switch** located on the side of the microphone to **🎵 Song** position to enable song mode.
- Press the **Song Button** to turn on the microphone. Lights will flash and after a quick introduction, the microphone will automatically start playing the first built-in song.
- Press and hold the **Mic Button** to sing along to the song.
- Press the **Song Button** again to play the next song.
- Press the **Song Button** again to turn the microphone off.

MP3 Mode

- Slide the **Mode Switch** to **📁 MP3** position to enable MP3 mode.
- Press the release tab on the MP3 cable compartment cover and remove cover.
- Connect the plug on the MP3 Audio Cable (included) to the headphone or line out jack on your MP3 player or other audio device.
- Fit the MP3 Audio Cable into the cable slot towards the bottom of the microphone and close the MP3 compartment door.
- Turn on and play your MP3 player/audio device.
- Press the **Song Button** to turn on the microphone and hear the music on your MP3 player/audio device.
- Press and hold the **Mic Button** to sing along with your MP3 player/audio device.
- Press the **Song Button** again to turn the microphone off. Remember to turn off your MP3 player or other audio device, too. There is a 5 minute timer that will automatically turn off MP3 playback. Press the **Song Button** again to resume MP3 playback.

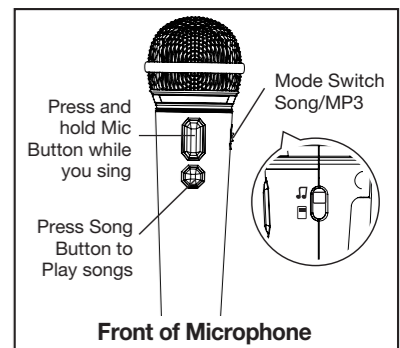

Front of Microphone

