

**HELLO  
KITTY**® | iHome

Model: Si-B62  
Bluetooth  
FM Clock Radio  
with USB Charging



instruction manual

# Si-B62

## Introduction

Thank you for purchasing the Si-B62. This product is designed to provide high quality wireless sound from your iPad, iPhone, iPod or other Bluetooth audio device.

Along with the included Quick Bluetooth Connection Guide this instruction booklet explains the basic operation and care of the unit. Please read them carefully and keep for future reference.

## Maintenance

- Place the unit on a level surface away from sources of direct sunlight or excessive heat.
- Protect your furniture when placing your unit on a natural wood and lacquered finish. A cloth or other protective material should be placed between it and the furniture.
- Clean your unit with a soft cloth moistened only with mild soap and water. Stronger cleaning agents, such as thinner or similar materials can damage the surface of the unit.

## FCC Information

### FCC Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This device complies with Part 15 of the FCC Rules, operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
  - Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.

CAN ICES-3 (B)/NMB-3(B)

### IC Statement

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et la conformité à l'exposition de RSS-102 rf, utilisateurs peut obtenir l'information canadienne sur l'exposition et la conformité de rf.

# Si-B62

FCC ID: EMOSIB62

IC: 986B-SIB62

# Si-B62

## Table of Contents

Meet Your Si-B62.....	5
The Display/Setting Up the Unit.....	6
Replacing and Installing Clock Backup Batteries.....	7
General Purpose Battery Use Cautions and Tips for Safety and Best Performance.....	8
Setting the Clock/Setting and Using the Alarms.....	9
Previewing Alarms and Turning Alarms On/Off .....	10
FM Radio/Setting and Using FM Presets.....	10
Snooze/Dimmer Button/Sleep Mode .....	11
Pairing Your Device Via Bluetooth .....	12
Pairing with a Different Device.....	12
Playing Audio Via Bluetooth/Playing Audio Via Aux-in .....	13
Charging Devices via USB Port .....	14
Troubleshooting .....	15
Consumer Product Safety Guide .....	16
Warranty.....	17

# Si-B62

## Included

- Si-B62 unit
- 100V-240V universal AC adaptor
- 12 inch audio cable
- 2 AAA batteries



Si-B62




AC adaptor



12 inch audio cable

# Si-B62

## Meet Your Si-B62

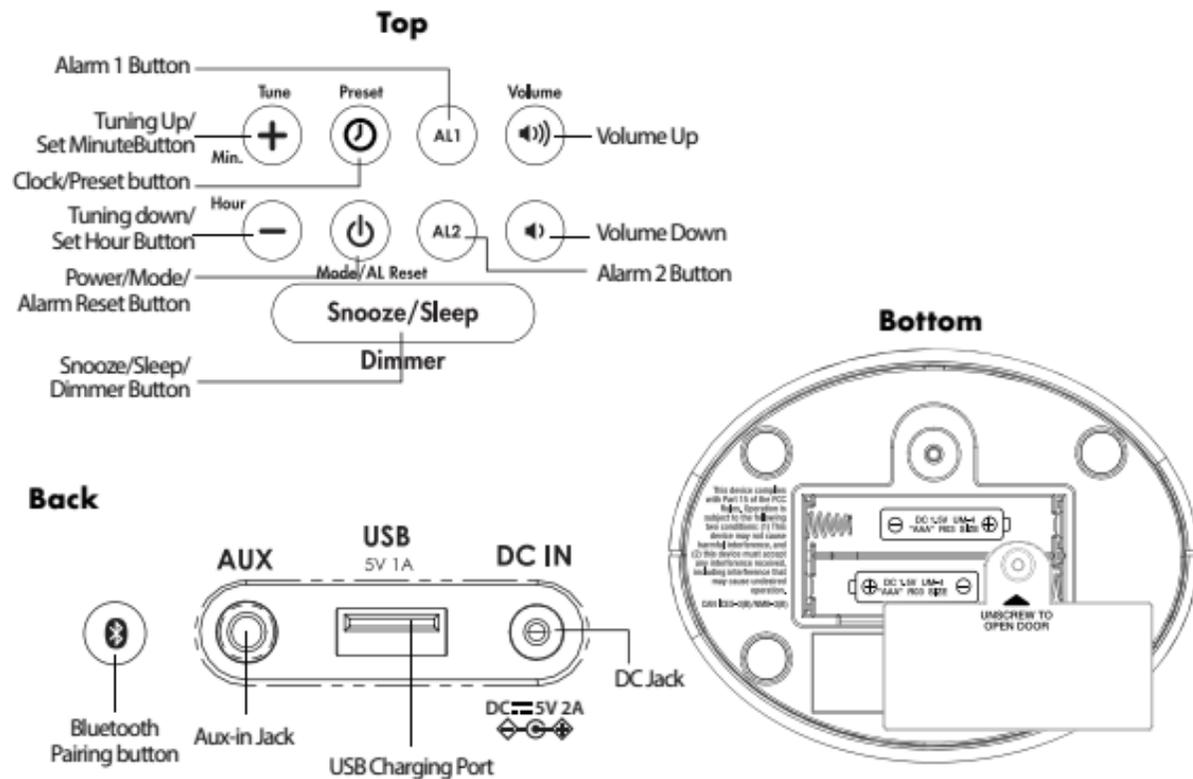

# Using the Si-B62


## The Display



## Setting Up the Unit

Connect the included AC adaptor to the DC jack located on the back of the unit and connect the other end to a working wall outlet. To turn unit on press and release the  Button.

To turn the unit off, press and hold the  Button.

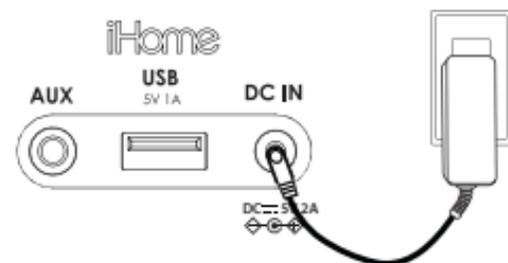

## Using the Si-B62

### Replacing and Installing Clock Backup Batteries

Note: 2 AAA batteries are included with the unit. Install them before using the unit.


This model is equipped with a battery backup circuit that will maintain the time and alarm time settings in the event of a temporary power interruption (the display is NOT maintained). The battery backup circuit will also operate the buzzer alarm to wake you up at the selected wake up time even if the power is out. When the backup batteries are getting weak the Low Backup Battery Indicator will appear solid on the display. When you see this flashing indicator you should replace the backup batteries as soon as possible. Note: We recommend alkaline batteries for best performance.

To install/replace the backup batteries:

**IMPORTANT:** When replacing the backup batteries be sure to have the unit connected to the AC outlet to maintain all of your settings, otherwise it will be necessary to reset the time and alarm time after the batteries are replaced.

1. Slide and remove the battery door located on the bottom of the unit. If replacing batteries, remove the exhausted batteries.
2. Insert 2 fresh AAA batteries in the backup battery compartment. Make sure the polarity of the batteries ("+" or "-" nodes) matches the illustration.
3. Slide and close the battery compartment door. Confirm that the backup battery indicator is not flashing in the display.

Note: Make sure you dispose of batteries properly (see your local regulations)

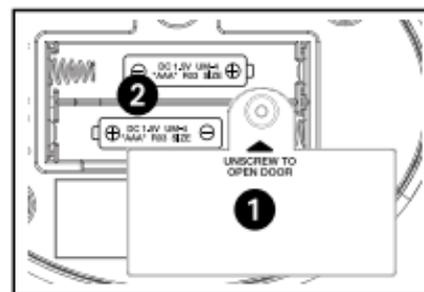

Replacing Backup Battery

## Using the Si-B62

### General Purpose Battery Use Cautions and Tips for Safety and Best Performance

- Only use the recommended/supplied batteries or equivalent.
- Use alkaline batteries for longer life.
- Do not mix old and new batteries, and do not mix alkaline, carbon-zinc or rechargeable nickel-cadmium batteries
- Insert batteries with proper polarity (+/-) as indicated.
- Remove exhausted batteries from product.
- Recharge rechargeable batteries under adult supervision.
- Do not attempt to recharge non-rechargeable batteries.
- Do not open batteries or heat them beyond normal ambient temperatures.
- To prevent battery leakage or damage remove batteries from a product if it will not be used for a month or longer.
- Use extreme caution handling leaking batteries (avoid direct contact with eyes and skin). If battery leakage comes in contact with eyes, IMMEDIATELY flush the eye with lukewarm and gently flowing water for at least 30 minutes. If skin contact occurs, wash skin with clear water for at least 15 minutes. Seek medical attention if any symptoms occur.
- Store in cool, dry, ventilated area away from hazardous or combustible material.
- Do not dispose of batteries in the household trash or fire.
- Follow applicable laws and local regulations for the disposal and transportation of batteries.

# Using the Si-B62

## Setting the Clock

1. When the unit's power is off, press and hold the  Clock/Presets Button for 2 seconds until the hour & minute display flashes and a beep sounds.
2. Press the  Button to adjust the clock to the current hour. Make sure you set the correct AM/PM time. The PM indicator appears to the left of the display (there is no AM indicator).
3. Press the  Button to adjust the clock to the current minute setting.
4. Press the  Clock/Presets Button to confirm the time and exit clock setting mode. 2 beeps will confirm clock setting is complete.

## Setting and Using the Alarms

This unit has 2 separate alarms, each set the same way. Below we explain how to set Alarm 1.

To set alarm 2, follow the same steps using the AL2 Button.

Time and alarms can be set whether the unit is OFF or ON (as long as the alarm isn't currently sounding).

Note: each step must be completed while display is flashing, or the step will time-out and save only the last setting.

1. Press and hold the AL1 Button for 2 seconds until the hour & minute display flashes and AL1 alarm indicator flash.
2. Press the  Button to adjust the alarm time to the desired hour (hold for rapid setting). Make sure you set the correct AM/PM alarm time. The PM indicator appears on the left of the display.
3. Press the  Button to adjust the alarm minutes to the desired setting.
4. Press the AL1 Button to confirm the alarm time setting. The red indicator on the right side of the display will flash.
5. Press the  or  Buttons to select the desired wake to alarm source: buzz, or FM radio or Bluetooth. Once confirmed, the selected wake to source indicator will also flash on the display.
6. Press the AL1 Button to confirm the alarm settings and exit alarm setting mode. 2 beeps will confirm alarm time setting is complete. The alarm indicator will remain on the display, showing the alarm is armed.

## Previewing Alarms and Turning Alarms On/Off

- Quickly press and release an Alarm Button to view the current alarm time and wake source.
- Press again to turn the alarm OFF, indicated by the red AL1 or AL2 alarm indicator disappearing from the display.
- When the alarm is sounding, press AL1, AL2, or  Power/Mode/AL. Reset Button to silence the alarm while maintaining settings.

## FM Radio

Extend the FM antenna located on the back of the unit for best reception.

1. Press and release the  Power/Mode/AL. Reset Button as needed until the FM indicator icon and current FM radio frequency appear on the display.
2. Press the  or  Buttons to tune the radio to the desired station (hold to scan for the next clear station).
3. Press the  or  Buttons to adjust the volume on the unit.
4. When you are through listening, press and hold the  Power/Mode/AL. Reset Button to turn the unit off.

## Setting and Using FM Presets

The unit allows you to store up to 10 FM radio station presets

1. Press and release the  Power/Mode/AL. Reset Button as needed until the FM indicator icon and current FM radio frequency appear on the display.
2. Press the  or  Buttons to tune the radio to the desired station (hold to scan for the next clear station).
3. Press and hold the  Clock/Presets Button to setting mode (P01- P10 will flash 3 seconds), push the  or  Buttons to select the preset number (P01- P10) you wish to set.
4. Press and release the  Clock/Presets Button to confirm. Continue steps 2-4 until you have set up to 10 preset stations.
5. To listen to a preset FM station at any time, just push Clock/Preset Button on FM radio mode and cycle to the desired preset.

## Using the Si-B62


### Snooze/Sleep/Dimmer Button

- Snooze:** While the alarm is sounding, press and release the Snooze/Sleep/Dimmer Button to temporarily silence the alarm for 9 minutes. Snooze can be used several times during alarm.
- Dimmer:** To adjust the brightness of the display from high to low, press and hold the Snooze/Sleep/Dimmer Button during normal operation (when no alarm is sounding).
- Sleep:** This unit allows you to sleep to the current sound source. When unit power on to set Sleep time, press and release the Snooze/Sleep/Dimmer Button as needed to cycle to the desired sleep duration: 120, 90, 60, 45, 30, 15, 10 minutes or OFF.

## Pairing Your Device Via Bluetooth

## Using the Si-B62

Whenever the unit is powered ON, the Si-B62 will attempt to autolink to a previously paired device. If no device is paired or to pair a new device, pair the Si-B62 by following the steps below.

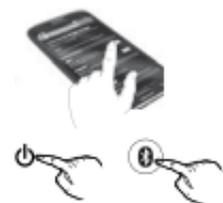

1. Make sure your Bluetooth device is fully charged. Turn on your Bluetooth device and make it "discoverable" by turning on Bluetooth mode (check in Options or Settings).
2. Press the Power/Mode/AL. Reset Button **1** on top of the unit and select BT mode. Press and hold the Bluetooth Pairing Button **2** on the back of the unit for 3 seconds. The red LED Bluetooth indicator on the display will blink, indicating the Si-B62 is in pairing mode.

3. "HelloKittySi-B62" should appear in your device's Bluetooth menu. If "Not Paired", "Not Connected" or similar message appears on your device, select "HelloKittySi-B62" to connect it. If prompted for a passcode, enter "1234" on your device's keypad.



4. If pairing is successful, the Bluetooth indicator will appear solid red as BT music is playing; the Bluetooth indicator will blink slowly when music is paused. There should also be an indication on your device. If no device is successfully paired within 3 minutes, follow steps 1-3 above to attempt pairing again.

NOTE: Once the Si-B62 is paired to a device, it will attempt to autolink when the device is within range (about 30 feet).

## Using the Si-B62

### Playing Audio Via Bluetooth

1. Press and release the  Power/Mode/AL. Reset Button as needed until the Bluetooth indicator icon appears on the display.
2. Adjust the volume output on your device to at least 50%. Press the Play button on the linked Bluetooth device to play audio from your linked Bluetooth device.
3. Press the  or  Buttons to adjust the volume on the unit.
4. When done listening, press and hold the  Power/Mode/AL. Reset Button to turn the unit off.

### Playing Audio via Aux-In


1. Connect one end of the included standard stereo 3.5mm audio cable into the aux-in jack on the back of the unit and the other end into the headphone or output jack of your audio device.
2. Press and release the  Power/Mode/AL. Reset Button as needed until the AUX indicator icon appears on the display.
3. Power on your device and place in play mode. Adjust the volume output on the device to at least 50%.
4. Press the  or  Buttons to adjust the volume on the unit.
5. When done listening, press and hold the  Power/Mode/AL. Reset Button to turn the unit off.  
Remember to turn off your audio device, too.

## Using the Si-B62

### Charging Devices via USB Port

1. Connect the standard size end of a USB cable (not included) to the USB Port on back of the unit and connect the other end to the charging port on your device.
2. Monitor the charging on your device. Some devices use a proprietary charging method and will not charge using the USB Port. If this happens, you must charge your device using the charger that came with it.

NOTE: unit must be plugged into working outlet to charge devices

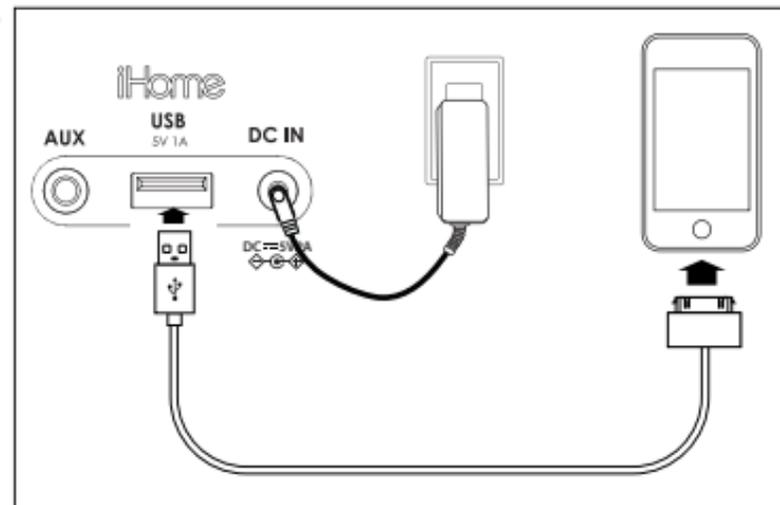

## Troubleshooting

### Unit doesn't respond

- Check that all connections are correct and properly plugged in.
- Only use the AC adaptor that came with the unit
- Make sure your device is properly paired with the Si-B62.
- Make sure the Power is ON.

### Unit doesn't respond (locked up or frozen)

- The unit may need to be reset. To do so, unplug the unit from power source and remove the backup batteries. Let unit stand for 2 minutes. Re-install backup batteries and connect unit to power source. You will need to reset the clock, radio, and any other settings.

### Trouble pairing device with Si-B62

Bluetooth implementation varies depending on your device's hardware and operating system. Please see [www.ihome.com/support](http://www.ihome.com/support) for updates on pairing.

- When the last previously paired device is within range (about 30 feet), the Si-B62 will auto-link to it as long as the power is ON and the unit is in 'bt' mode. (Select 'bt' mode by pressing the Power/Mode/AL. Reset Button  until 'bt' flashes on the display.) When the device is out of range, the Bluetooth icon will appear for 3 minutes as the unit attempts to relink. (See full pairing instructions on page 12 of this manual.)
- Make sure your device is working properly. Check your device's manual for details on Bluetooth pairing and linking.

For further information and to see the latest instructions, visit [www.ihome.com/support](http://www.ihome.com/support)

## IMPORTANT SAFETY INSTRUCTIONS

When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in these instructions and on the unit.

1. Water and Moisture – The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
2. Ventilation – The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
3. Heat – The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
4. Power Sources – The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance. Only use the AC adapter that came with the unit.
5. Power-Cable Protection – Power supply cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. It is always best to have a clear area from where the cable exits the unit to where it is plugged into an AC socket.
6. Cleaning – The unit should be cleaned only using a warm damp cloth. Do not use solvents, etc.
7. Objects and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into any openings or vents located on the product.
8. Attachments – Do not use attachments not recommended by the product manufacturer.
9. Lightning and Power Surge Protection – Unplug the unit from the wall socket and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
10. Overloading – Do not overload wall sockets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
11. Damage Requiring Service – The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled into the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
12. Periods of Nonuse – If the unit is to be left unused for an extended period of time, such as a month or longer, the backup batteries should be removed from the unit to prevent damage or corrosion.
13. Servicing – The user should not attempt to service the unit beyond those methods described in the user's operating instructions. Service methods not covered in the operating instructions should be referred to qualified service personnel.

# Limited 1 Year Warranty

eKids, LLC, a wholly owned subsidiary of KIDdesigns, warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. The product must include proof of purchase, including date of purchase. An out-of-warranty fee for service will be charged for units that are received without proof of purchase.

Before returning this product for service, please first replace the batteries (if applicable) with fresh ones, as exhausted or defective batteries are the most common cause of problems encountered.

If service is still required, please call Customer Service at 1-800-288-2792 to obtain a Return Authorization Number and shipping instructions.

## Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons;

(ii) cracked or broken cabinets, or units damaged by excessive heat;

(iii) damage to digital media players, CD's or tape cassettes (if applicable);

(iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser.

In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

**Questions? Visit [www.ekids.com](http://www.ekids.com)**

**For any other questions: 1-800-288-2792 Toll Free**

© 1976, 2014 SANRIO CO., LTD.

Used Under License.

eKids/KIDdesigns, Inc.

iHome® is a registered trademark of

©2014 SDI Technologies, Inc. All Rights Reserved.