


eKids

TM

Model M48.FX

FASHION HEADPHONES

with built-in microphone

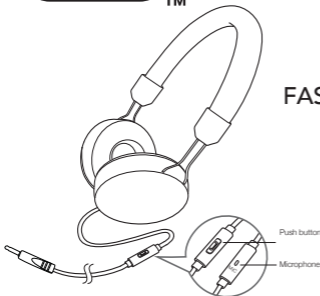


Using Your Headphones

Connect the headphone plug to the headphone jack of your music player. Be sure that the plug is fully inserted into the jack. If the plug is not fully inserted you may only hear sound from one side of the headphones.

To protect your hearing, always start listening with the Volume Control of your music player or game player set to a low level and gradually increase the volume to a comfortable listening level.

 IMPORTANT! Listening at high volume for long periods of time can result in long-term hearing damage. For your safety, do not use headphones if they would prevent you from hearing warning sounds, such as while riding a bike, etc. Remember that noise isolation type headphones such as these are very effective in blocking outside noise, including warning sounds. Always be aware of your surroundings and do not use these headphones in situations that require you to hear warning sounds.



The two ear cups may be adjusted up or down for most comfortable fit.

In-Line Control with Microphone

Model M48 includes an in-line, one-button controller that allows you to answer and end phone calls 'hands-free'. You may also be able to record voice memos and control the music playback if your specific phone model provides for control of those features through the headphone jack.

Answer / End Calls

When an incoming call is received, briefly press the controller button once to answer the call, and speak into the microphone. To end the call, briefly press the controller button again.

Music Playback Control

If your phone or music player provides for this feature through its headphone jack, press the controller button once to begin playback and once again to pause playback. Press the controller button twice to skip to the next track, or three times to skip back to the previous track.

Voice Commands

If your phone or music player provides for this feature through its headphone jack, press and hold the controller button to activate your device's voice commands menu. Once your device has launched the voice command menu you may then speak your instructions into the microphone, accessing features such as hands-free messaging, navigation, voice memo recording, and more. For the specific commands and operations accessible through your device's headphone jack, please refer to the user manual of your device.

Function*	Button press	Action
Incoming Call	1 click	Accept call
Incoming Call	Short press & hold	Reject call
*Call Waiting	1 click	Accept call
During Two Calls	1 click	Switch between calls
*During Two Calls	Short press & hold	End current call
Standby Mode	Press & hold for 2 seconds	Siri or Voice command
Standby Mode	1 click	Play music
During Music Play	1 click	Pause music
During Music Play	2 click	Next track
During Music Play	3 click	Restart track/Previous track

*Note: Functions may not operate with all devices. Check your device's user manual for details.

Limited One-Year Warranty

eKids, LLC warrants this product to be free from defects in workmanship and materials, under normal use and conditions, for a period of one (1) year from the date of original purchase.

Should this product fail to function in a satisfactory manner, it is best to first return it to the store where it was originally purchased. Should this fail to resolve the matter and service still be required by reason of any defect or malfunction during the warranty period, eKids will repair or, at its discretion, replace this product without charge. This decision is subject to verification of the defect or malfunction upon delivery of this product to the Factory Service Center authorized by Customer Service. If service is required, please call Customer Service at 1-888-TOP-TOYS to obtain a Return Authorization Number and shipping instructions.

Disclaimer of Warranty

NOTE: This warranty is valid only if the product is used for the purpose for which it was designed. It does not cover (i) products which have been damaged by negligence or willful actions, misuse or accident, or which have been modified or repaired by unauthorized persons; (ii) cracked or broken cabinets, or units damaged by excessive heat; (iii) damage to digital media players, CD's or tape cassettes (if applicable); (iv) the cost of shipping this product to the Factory Service Center and its return to the owner.

This warranty is valid only in the United States of America and does not extend to owners of the product other than to the original purchaser. In no event will eKids or any of its affiliates, contractors, resellers, their officers, directors, shareholders, members or agents be liable to you or any third party for any consequential or incidental damages, any lost profits, actual, exemplary or punitive damages. (Some states do not allow limitations on implied warranties or exclusion of consequential damages, so these restrictions may not apply to you.) This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Your acknowledgement and agreement to fully and completely abide by the above mentioned disclaimer of warranty is contractually binding to you upon your transfer of currency (money order, cashier's check, or credit card) for purchase of your eKids product.

Distributed by eKids, LLC

For questions or comments please call our toll-free number: **1-888-TOP-TOYS**

Also visit our website: www.ekids.com

1299 Main Street Rahway, NJ 07065